

# Premium single use

## Query own phone number

---

Go by pressing the information key  into the operator guidance.

Now press the key 3. Your call number is now shown in the display.

## Set password

---

\* 2 9      Enter the code number for "Change password".

XXXX      Enter the old password (default: 0000).

YYYY      Enter new password (4 digits).

YYYY      Repeat new password.



Exit the programming procedure. Your new password is now valid.

## Melody selection

---



Press the OK key. In standby mode, the currently valid melody is played.



Press the OK key again to hear the next melody..  
You can listen to the 16 different melodies by pressing this button.



Exit the programming procedure. The last melody played is now accepted.

## Adjusting the volume of the melody

---



Press the OK key. In standby mode, the currently valid melody is played.



The ringtone volume will be increased.



Reduces the volume of the ringtone



Confirm selection

## Adjusting the volume in the handset

---

To change the volume of the person you are talking to, press the following keys   during the call to adjust the volume.

## Setting the display contrast

---

Press the code number \* 3 8. The following display appears:



Now you can use the buttons  and  to change the brightness of your display. There are 16 different levels.

Please note that both displays change equally..

## Programming speed-dial destinations

---

You can program phone numbers on the (0 - 9, \*, #) keys.



Press information key





Press Plus




2

 Enter 2





Press Plus

 

2

 Enter 2




Enter the phone number or code number, then press  to confirm.  
(for external targets incl. exchange code 0)




Select the key on which you want to enter the phone number, or code number.




Exit

## Activating speed-dial destinations

---



Press "Single kW" and the key on which the speed-dial destination has been programmed.

# Programming function keys

You can program phone numbers or functions on the white function keys.



Press information key

Bedienungsführung >



Press Plus

Abfrage=1 Prog=2 >

2

Enter 2

Programmier-Modus >



Press Plus

Taste = 1 IndKW = 2

1


Enter 1

Bitte wählen: >



Enter the phone number or code number, then press  to confirm.  
(for external targets incl. exchange code 0)

 Taste auswählen



Select the key on which you want to enter the phone number, or code number.

123 = Herr Müller



Exit