

# Easy Single Use

## Query own phone number

---

Press the information key  to go to the operator prompts.

Now press the key "3". Your call number is now shown in the display.

## Set password

---

\* 2 9      Enter the code number for "Change password".

XXXX      Enter the old password (default: 0000).

YYYY      Enter new password (4 digits).

YYYY      Repeat new password



Exit the programming procedure. Your new password is now valid.

## Melody selection

---



Press the OK key. In standby mode, the currently valid melody is played.



Press the OK key again to hear the next melody.  
You can listen to the 16 different melodies by pressing this key.



Exit the programming procedure. The last melody played is now accepted.

## Adjusting the volume of the melody

---



Press the OK key. In standby mode, the currently valid melody is played.



The ringtone volume is increased.





Reduces the volume of the ringtone



Confirm selection

## Adjusting the volume in the handset

---



To change the volume of your call partner, press the  or  keys during the call to adjust the volume.

## Setting the display contrast

---

Press the code number \* 3 8. The following display appears:



Now you can use the buttons  and  to change the brightness of your display. There are 16 different levels.

## Programming speed-dial destinations

---

You can program phone numbers on the (0 - 9, \*, #) keys.



Press the information key

Bedienungsführung >



Press plus

Abfrage=1 Prog=2 >

2 Enter „2“

Programmier-Modus >




Press plus

Taste = 1 IndKW = 2

 
2 Enter 2

Bitte wählen: >



Enter the phone number or code number, then press  to confirm. (for external destinations incl. outside line code 0)

Taste auswählen



Select the key on which you want to enter the phone number,

123 = Herr Müller

or code number.



Exit

## Activating speed-dial destinations

---



". Single SD" and press the key on which the speed-dial destination was programmed.

# Programming function keys

You can program phone numbers or functions on the white function keys.



Press information key

Bedienungsführung >



Press plus

Abfrage=1 Prog=2 >

2

Enter „2“

Programmier-Modus >



Press plus


Taste = 1 IndKW = 2

1

 
Enter „1“

Bitte wählen: >



Enter the phone number or code number, then press  to confirm. (for external destinations incl. outside line code 0)

Taste auswählen



Select the key on which you want to enter the phone number, or code number want to program.

123 = Herr Müller



Exit